


3.25 Operation monitoring


Control panel – warning and indicator lights

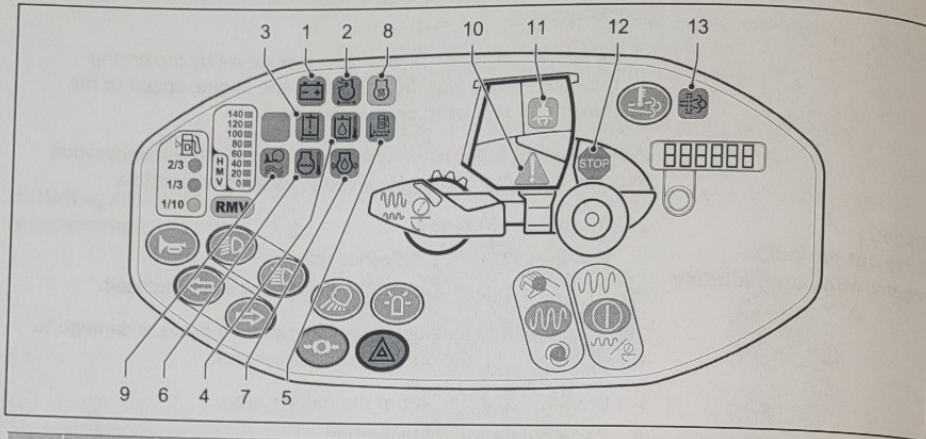

No.	Symbol	Warning and indicator lights	Status	Meaning/measure
[1]		Charge current (battery)	Flashes red	No charge current: Check the electrical system. Request assistance from customer service.
[2]		Air filter	Flashes red	The air filter cartridge is contaminated. Check the air filter.
[3]		Pressure filter for the hydraulic system	Flashes red	Filter cartridge of the hydraulic oil filter is contaminated. Replace the filter insert in the pressure filter for the hydraulic system.
[4]		Hydraulic oil temperature	Flashes red	Hydraulic oil temperature is high or the hydraulic oil has overheated. Switch off the engine, request assistance from customer service if necessary.
[5]		Water sump fuel prefilter	Flashes red	Water sump in the fuel prefilter too high. Drain the filter cartridge in the fuel prefilter.
[6]		Engine temperature	Flashes red	Engine temperature is high or the engine has overheated. Switch off the engine, check the coolant fill level, check the radiator.
[7]		Engine oil pressure	Flashes red	Engine oil pressure is too low. Check the engine oil fill level.

3.25 Operation monitoring


Control panel – warning and indicator lights

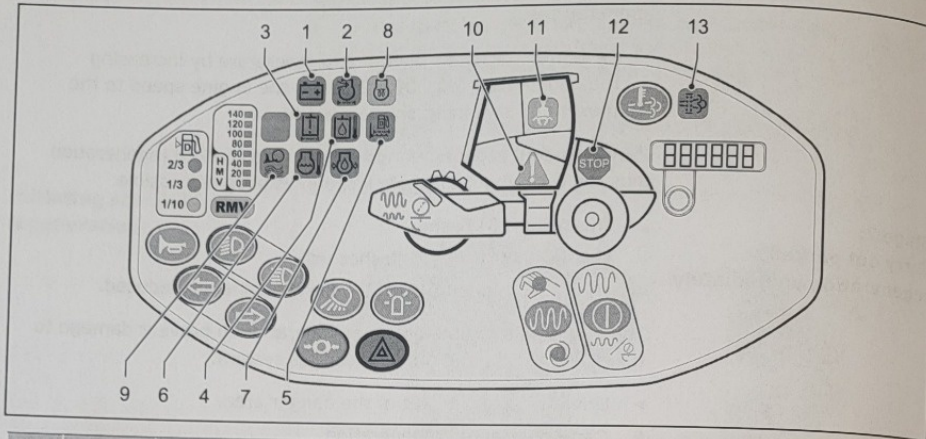

No.	Symbol	Warning and indicator lights	Status	Meaning/measure
[1]		Charge current (battery)	Flashes red	No charge current: Check the electrical system. Request assistance from customer service.
[2]		Air filter	Flashes red	The air filter cartridge is contaminated. Check the air filter.
[3]		Pressure filter for the hydraulic system	Flashes red	Filter cartridge of the hydraulic oil filter is contaminated. Replace the filter insert in the pressure filter for the hydraulic system.
[4]		Hydraulic oil temperature	Flashes red	Hydraulic oil temperature is high or the hydraulic oil has overheated. Switch off the engine, request assistance from customer service if necessary.
[5]		Water sump fuel prefilter	Flashes red	Water sump in the fuel prefilter too high. Drain the filter cartridge in the fuel prefilter.
[6]		Engine temperature	Flashes red	Engine temperature is high or the engine has overheated. Switch off the engine, check the coolant fill level, check the radiator.
[7]		Engine oil pressure	Flashes red	Engine oil pressure is too low. Check the engine oil fill level.

3.25 Operation monitoring

Control panel – warning and indicator lights

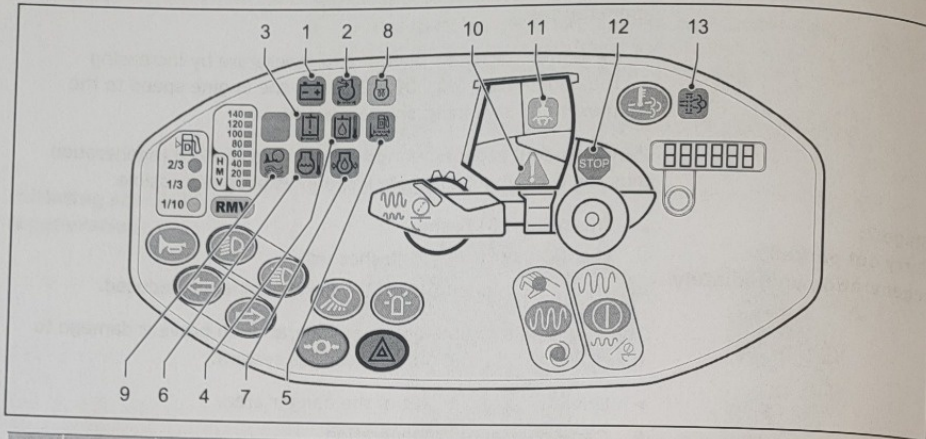

No.	Symbol	Warning and indicator lights	Status	Meaning/measure
[1]		Charge current (battery)	Flashes red	No charge current: Check the electrical system. Request assistance from customer service.
[2]		Air filter	Flashes red	The air filter cartridge is contaminated. Check the air filter.
[3]		Pressure filter for the hydraulic system	Flashes red	Filter cartridge of the hydraulic oil filter is contaminated. Replace the filter insert in the pressure filter for the hydraulic system.
[4]		Hydraulic oil temperature	Flashes red	Hydraulic oil temperature is high or the hydraulic oil has overheated. Switch off the engine, request assistance from customer service if necessary.
[5]		Water sump fuel prefilter	Flashes red	Water sump in the fuel prefilter too high. Drain the filter cartridge in the fuel prefilter.
[6]		Engine temperature	Flashes red	Engine temperature is high or the engine has overheated. Switch off the engine, check the coolant fill level, check the radiator.
[7]		Engine oil pressure	Flashes red	Engine oil pressure is too low. Check the engine oil fill level.